

 
Snap-It Apogee

 
Instruction Manua

 




 










 


 













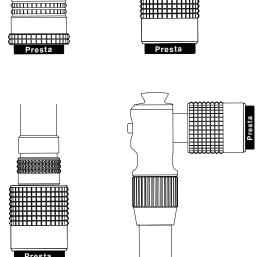


Depending on the model, Birzman pumps are equipped with either a straight or L-shaped Snap-It Apogee valve head.

The same usage instructions are applicable to both options.


Note:

 Please ensure the valve head is parallel with the valve and pressed all the way down when inserted.

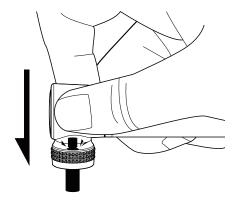

• Please refrain from lubrication attempts.

Snap-It Apogee is compatible with:

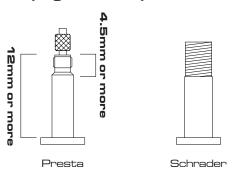

Replacement Instructions:



The grooved side should be facing inwards.

Patented Technology