





- Lift the lever up to push the parts out for easier access.

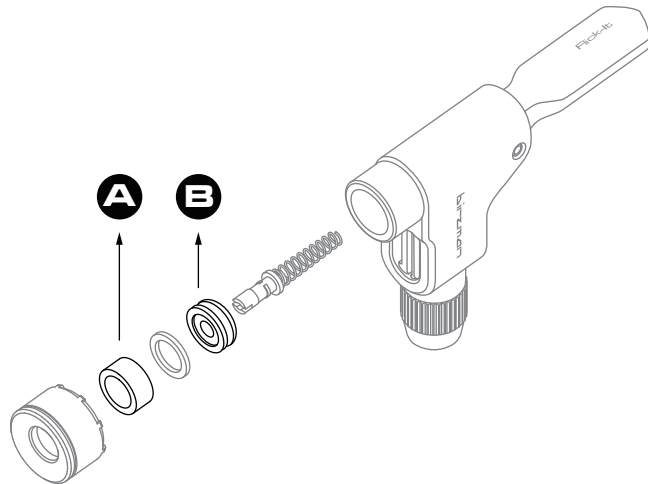

A

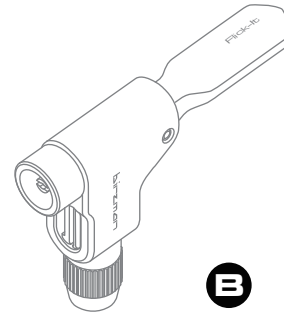

B

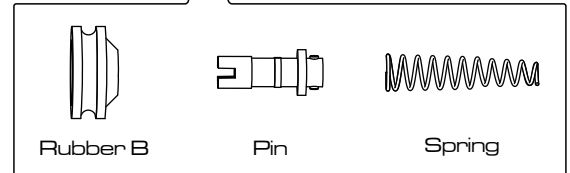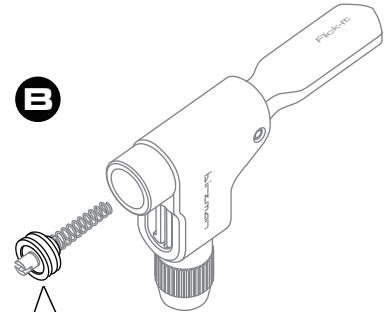

- Join the wider side of the spring with the pin.
- Insert the pin through Rubber B.
- Place all into the housing and push down tightly.



The flatter side of Rubber B should be facing outwards.